
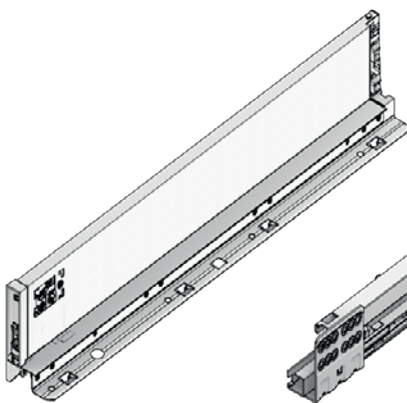



Tekform Slimline+ Drawer

Assembly instructions

Titus+

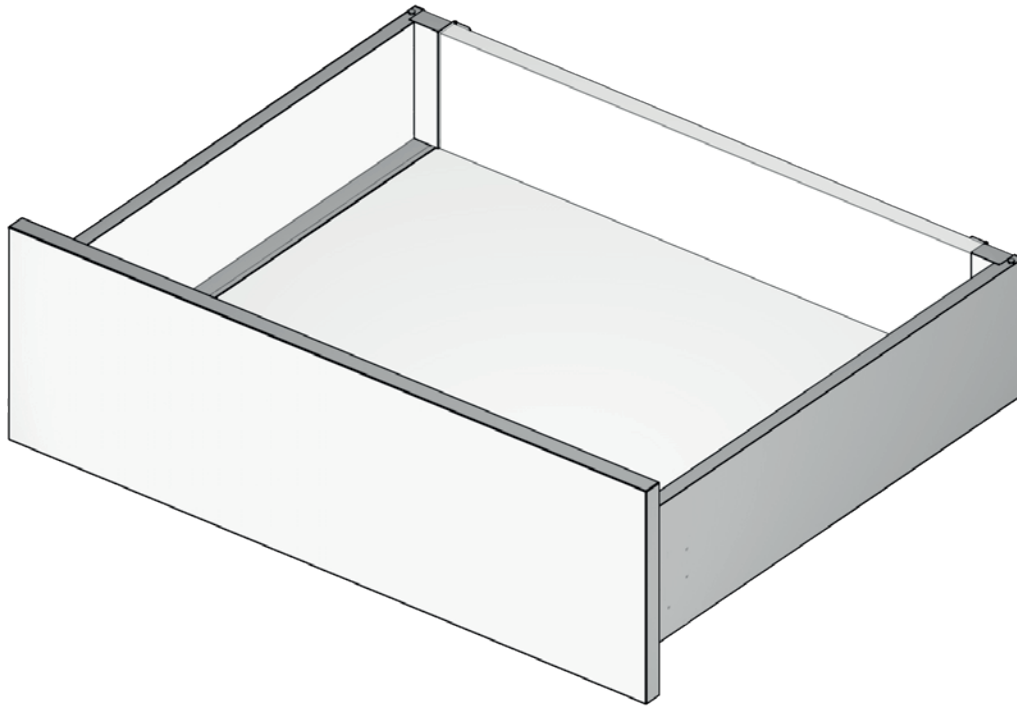


2x

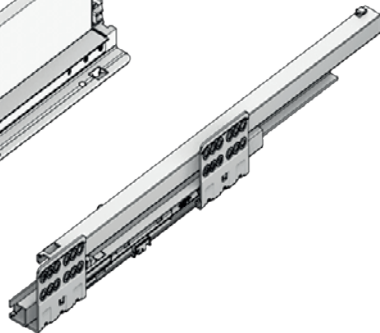

2x



2x




2x



2x

Tool needed for assembly

PZ2



Recommended screws (not included)

Ø6.3 x 13mm




Ø3.5 x 15mm







Tekform Titus+

Runner mounting


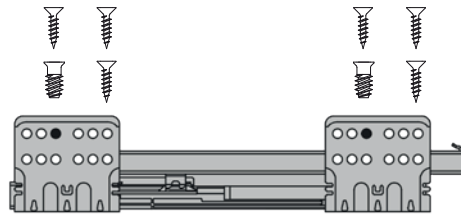
i




Ø6.3 x 13mm  
 Ø3.5 x 15mm  





NL=270 mm
 NL=300 mm
 NL=350 mm
 NL=400 mm
 NL=450 mm

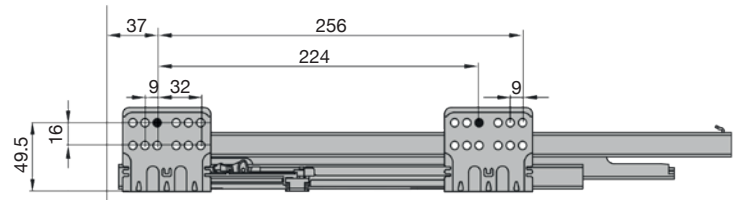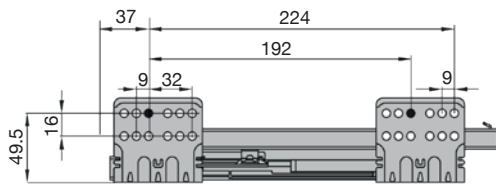NL=500 mm
 NL=550 mm

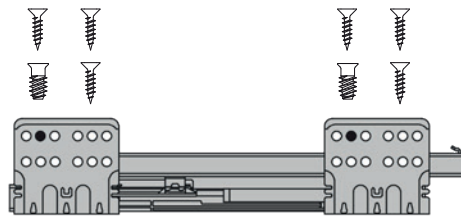



i



Ø6.3 x 13mm  
 Ø3.5 x 15mm  



NL=270 mm
 NL=300 mm
 NL=350 mm
 NL=400 mm
 NL=450 mm

NL=500 mm
 NL=550 mm

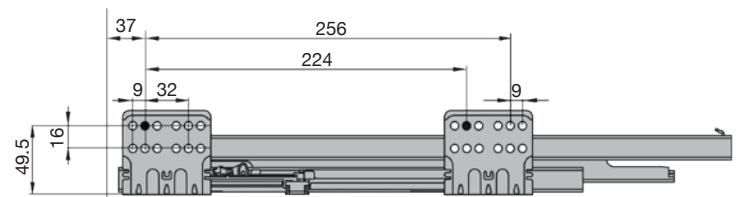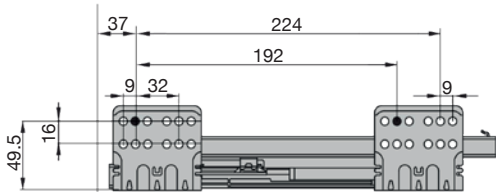


Planning

i

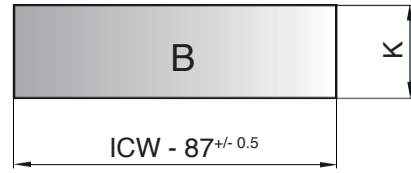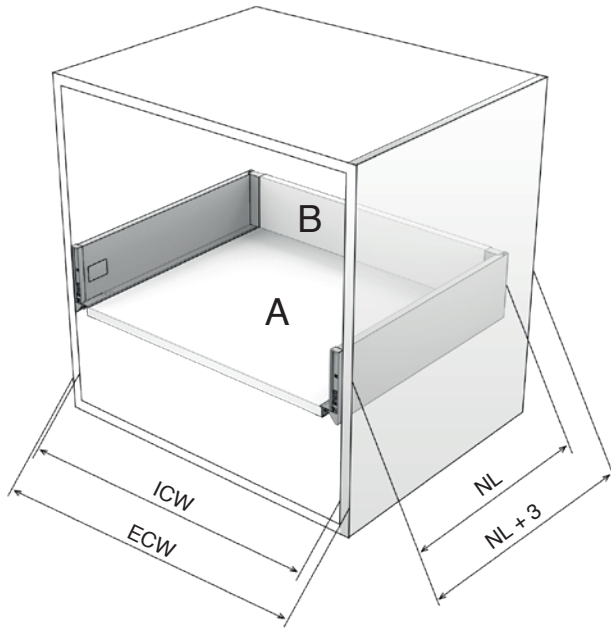


DW70	K=68
DW100	K=100
DW145	K=151
DW182	K=183



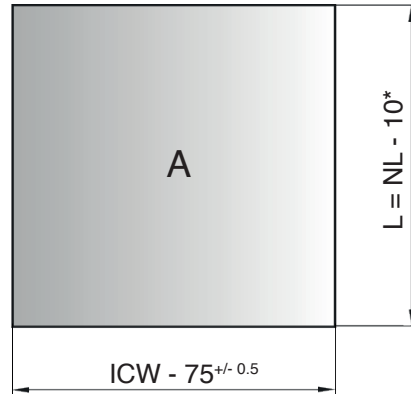


* For drawers with steel back panel
L = NL - 20

Front Panel Dimensions and Drilling

i DW70

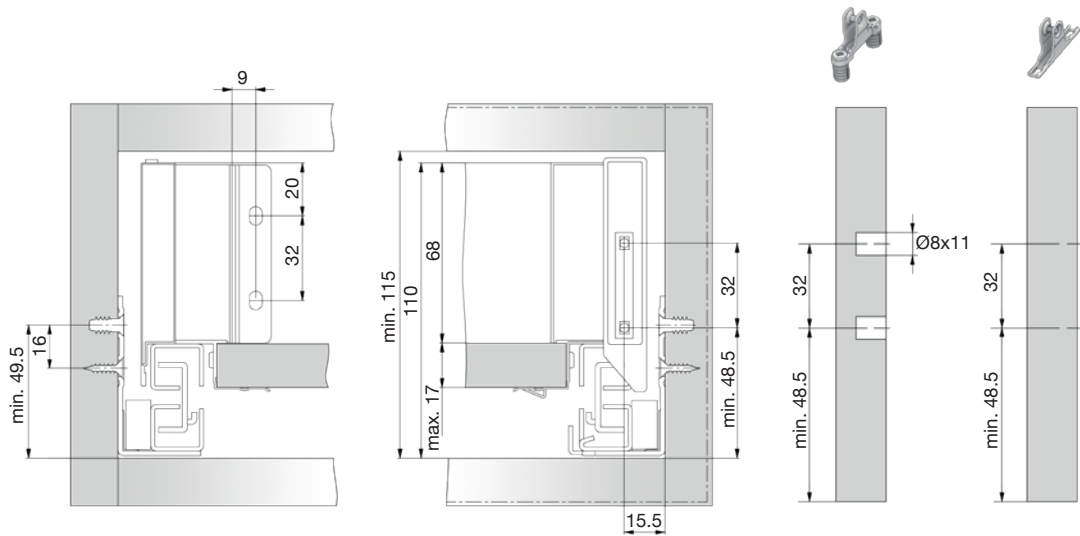


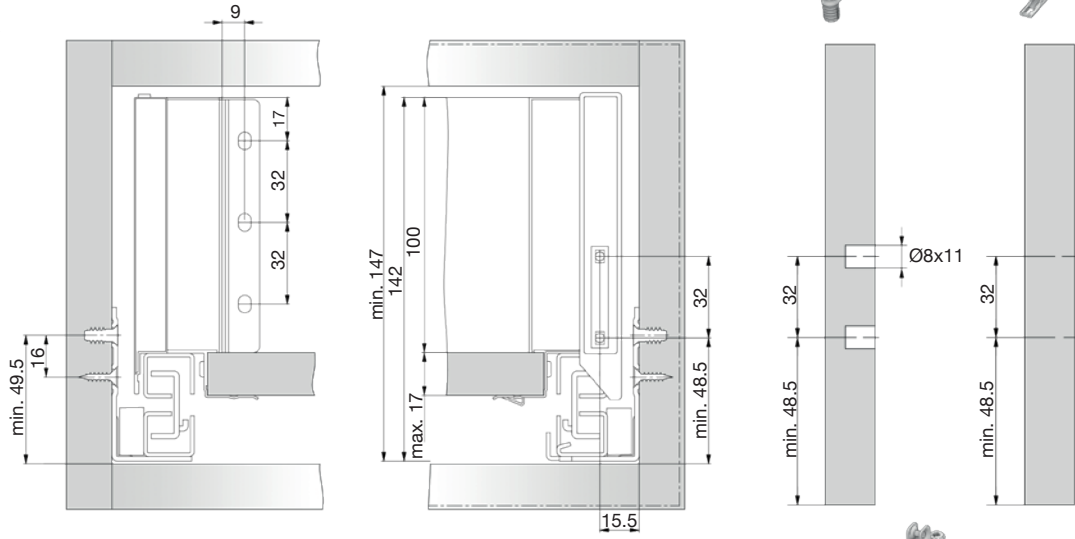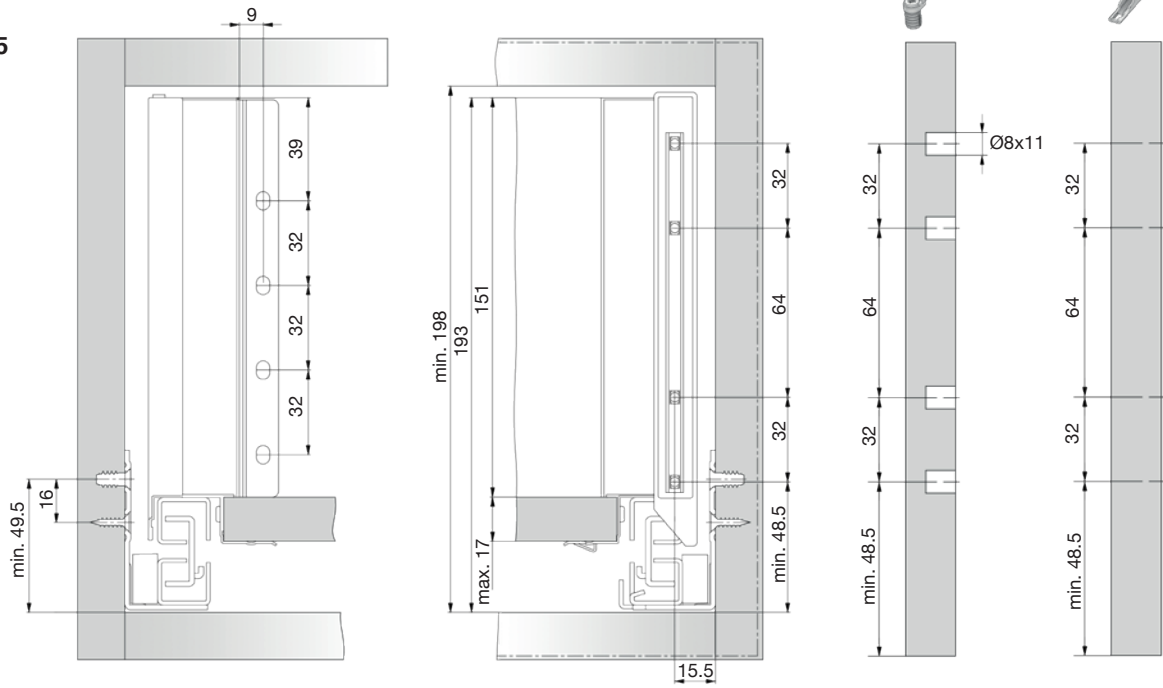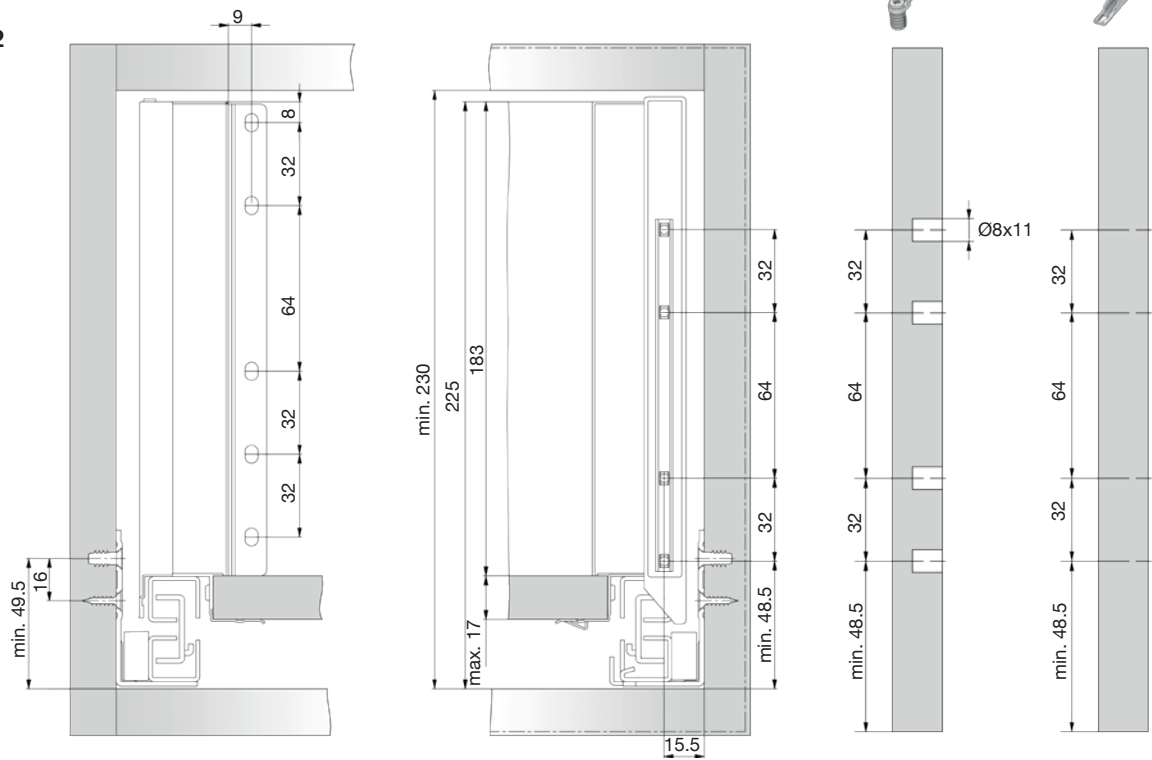i**DW100****DW145****DW182**


Assembly wooden back panel

1


2x

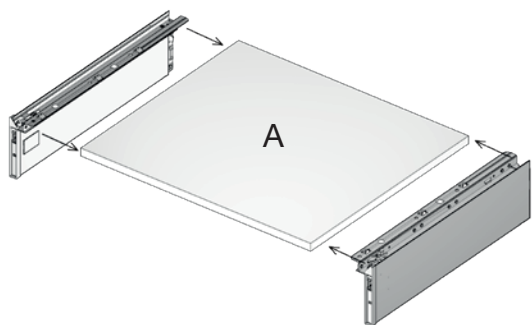

8x




Ø3.5 x 15 mm

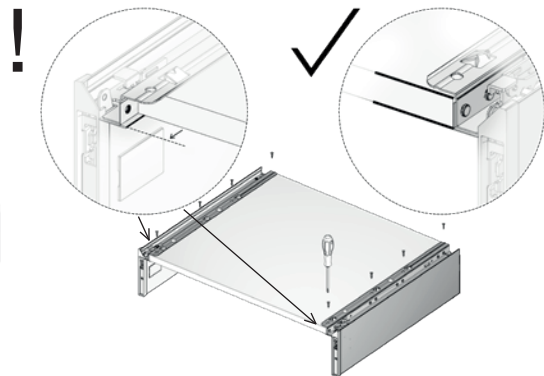


2


2x

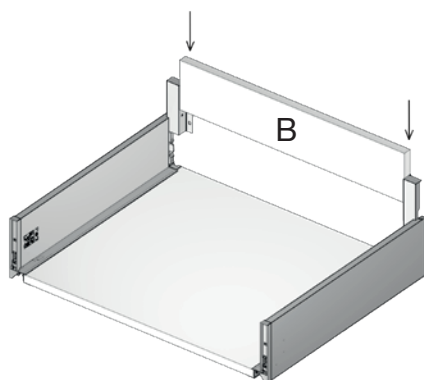

4x





Ø3.5 x 15 mm

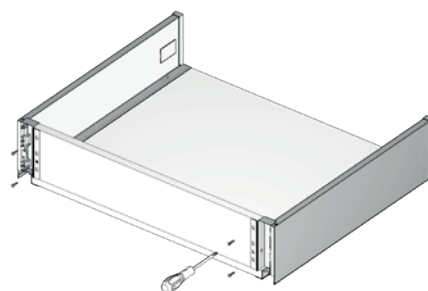


Assembly steel back panel


1

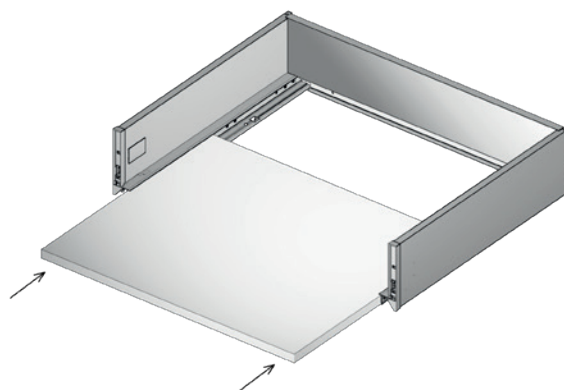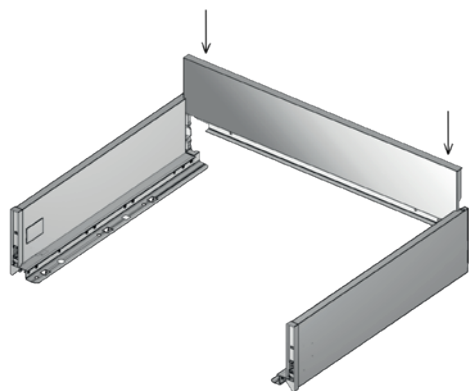


2

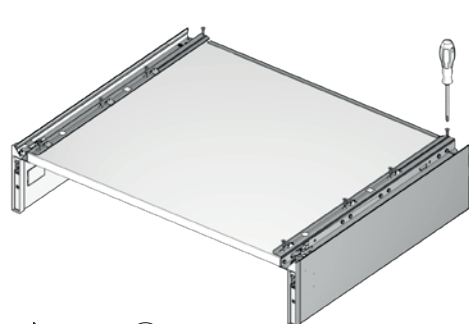


8x



Ø3.5 x 15 mm

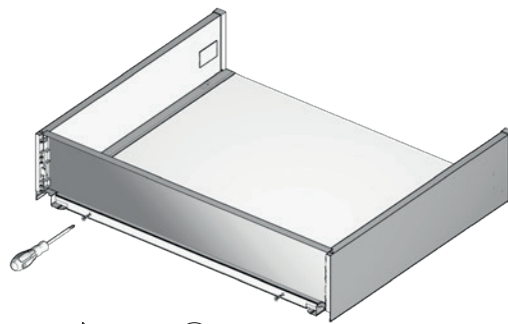

2x



Ø3.5 x 15 mm

Insertion of Front Connectors

3


2x





4x




Ø3.5 x 15 mm

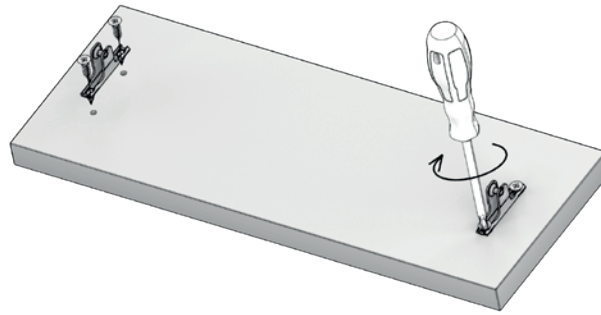

2x


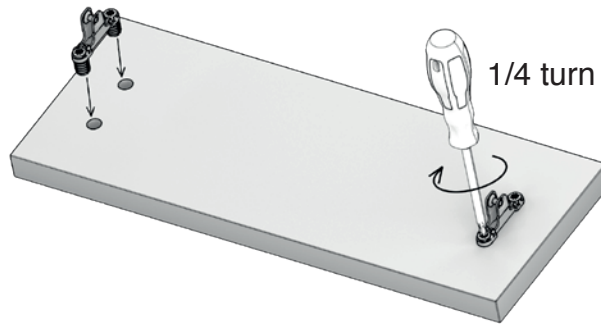



1/4 turn

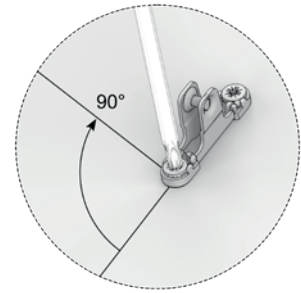



Front Panel Mounting

4

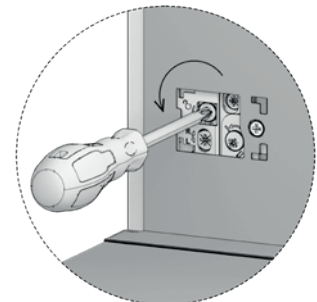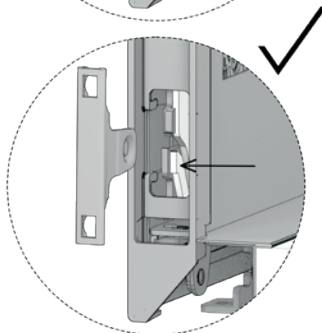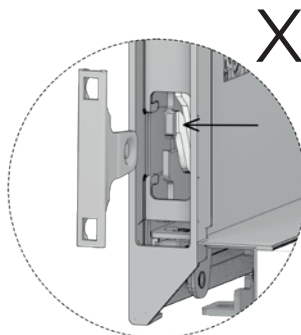


Drawer Insertion

5

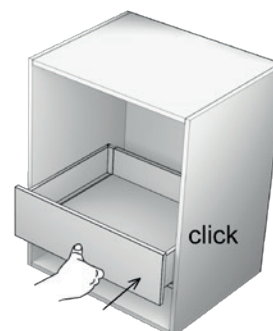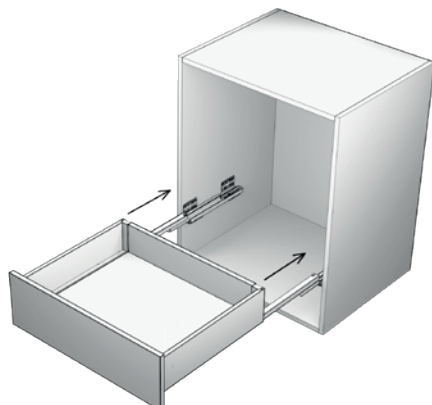


Adjustments


i

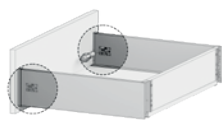




Side adjustment

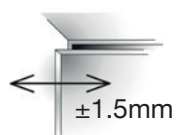

Height adjustment



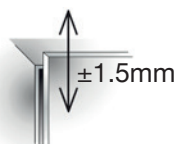


Tilt adjustment

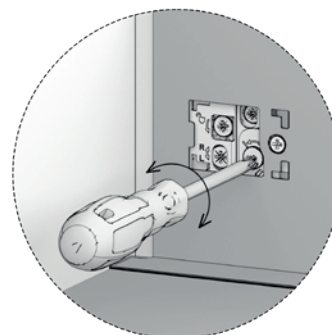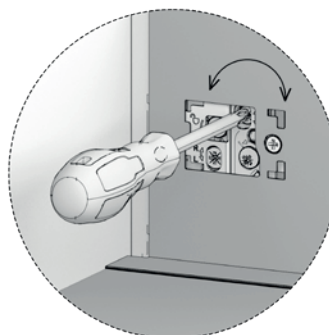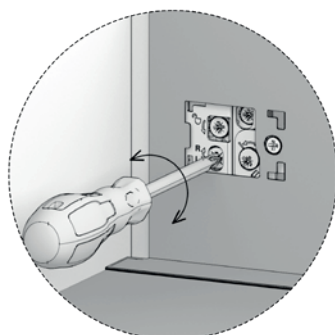



Drawer removal

i

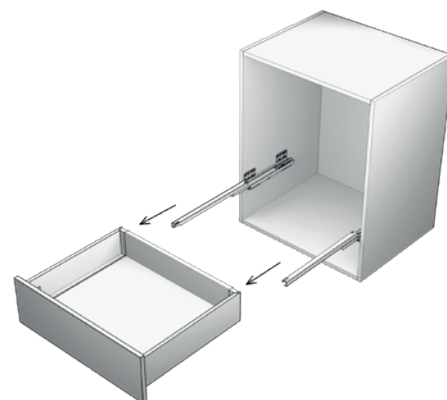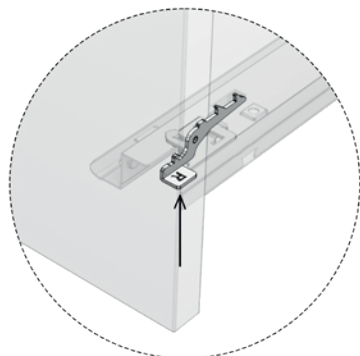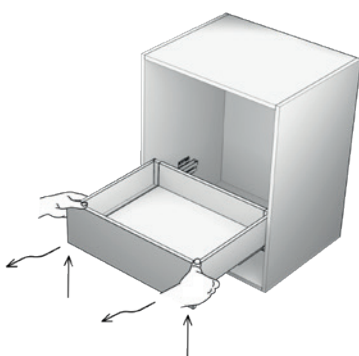



Front panel removal

i

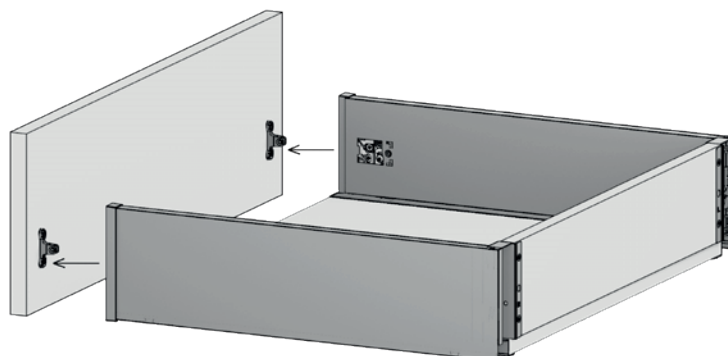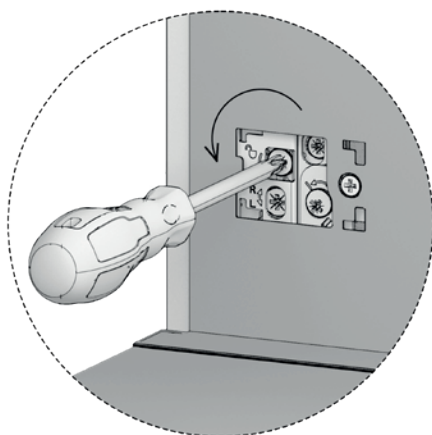

Assembly of Inner Drawer Front

1 Cutting dimensions

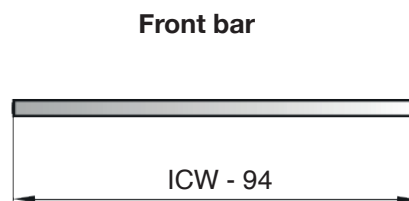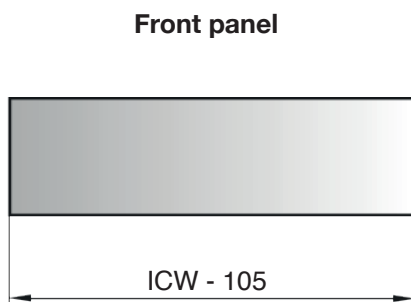


2 Slimline+ DW70


2x



1x



4x

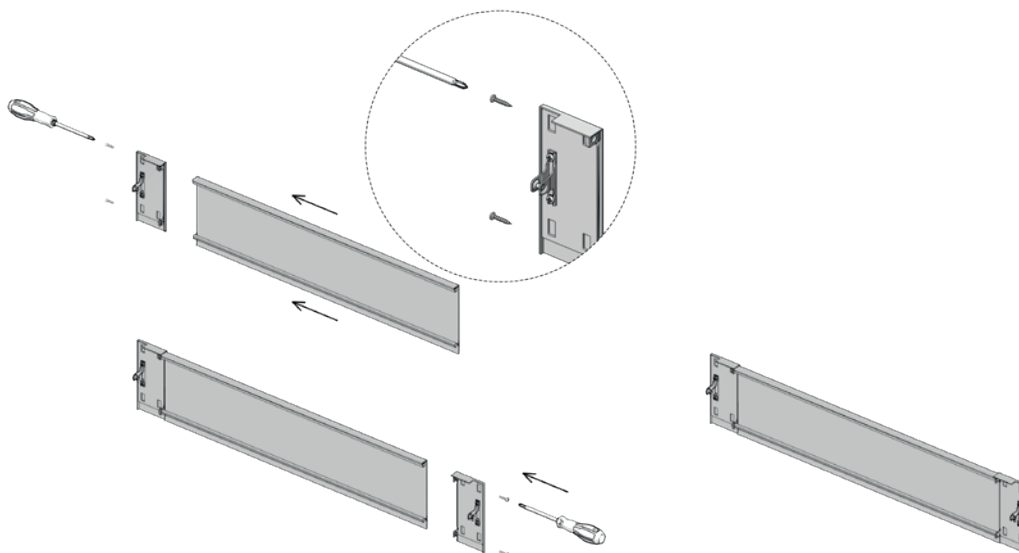

Slimline+ DW145 / DW182

2x



1x



1x



4x

